Radio System, only for vehicles with green illuminated instrument cluster

From September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

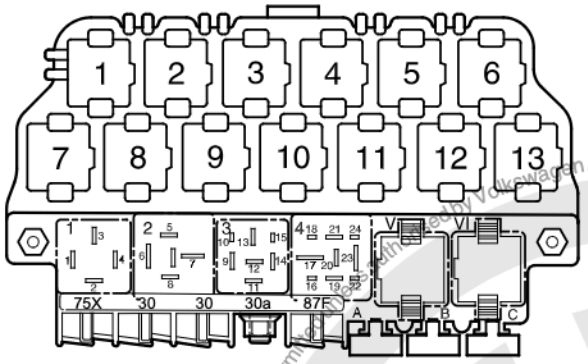

3B–20676

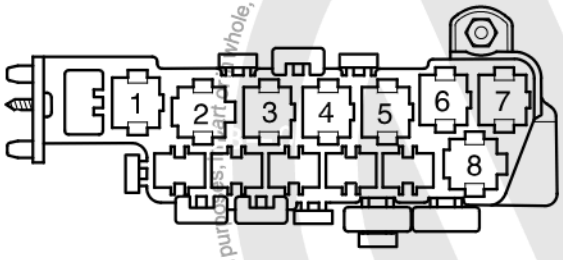

3B–20515

Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

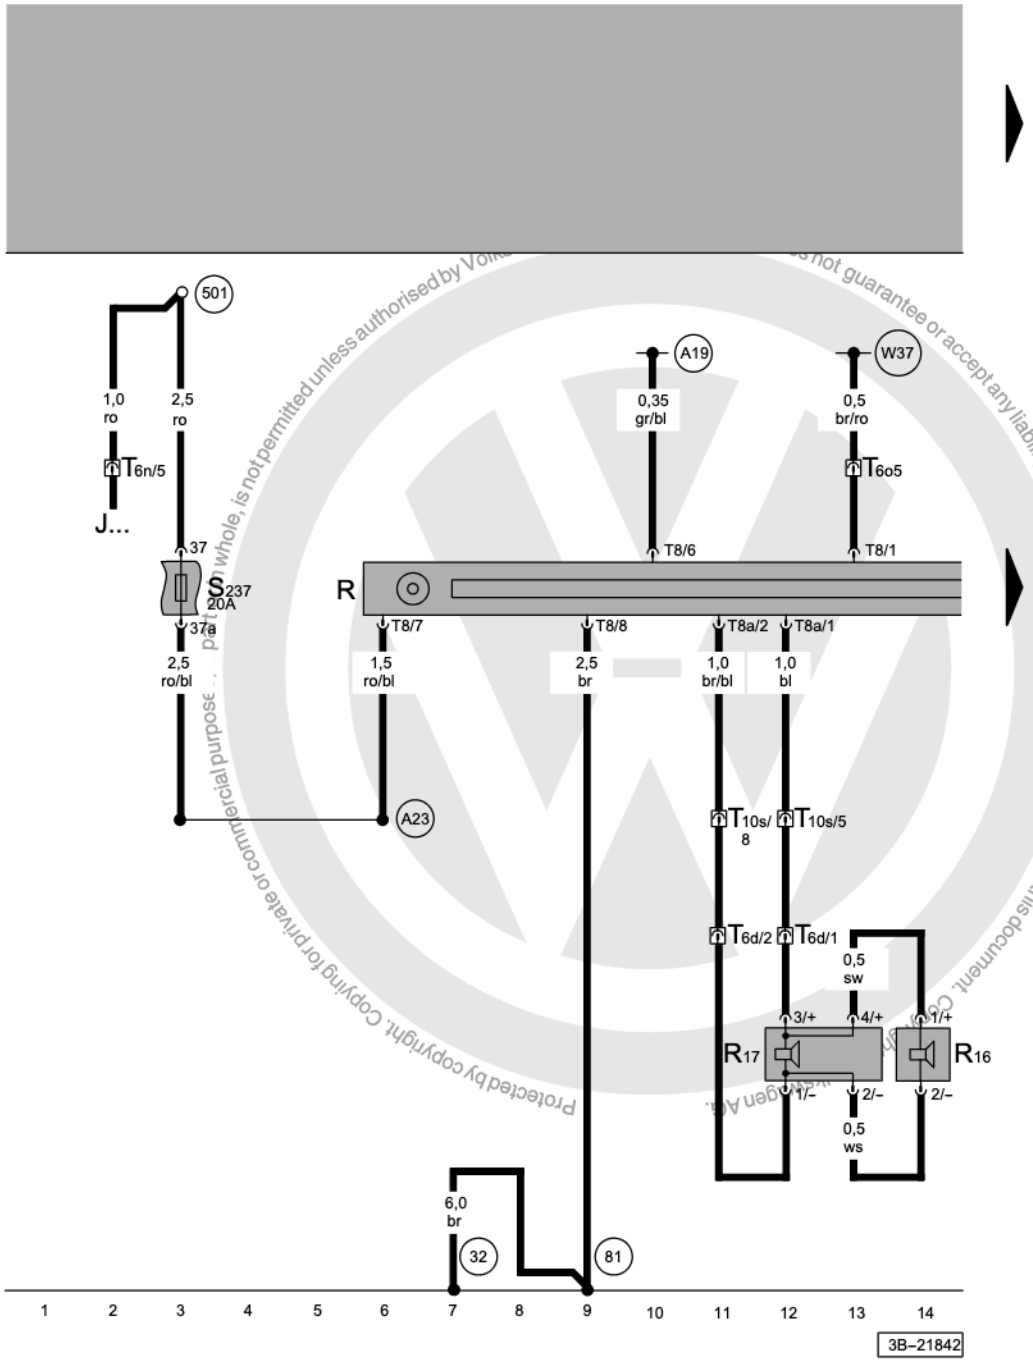

Radio, right rear speakers

J...	Engine Control Module (ECM)
R	Radio
R16	Treble speaker, right rear, in right rear door
R17	Bass speaker, right rear, in right rear door
S237	Fuse 37 in fuse holder
T6d	6-Pin Connector, red, on B-pillar, right
T6n	6-Pin Connector, red, on protective housing for control module
T6o	6-Pin Connector, white, connector station A-pillar, right
T8	8-Pin Connector, black, on radio
T8a	8-Pin Connector, brown, on radio
T10s	10-Pin Connector, white, connector station A-pillar, right
32	Ground connection, behind instrument panel, left
81	Ground connection -1-, in instrument panel wiring harness
501	Threaded connection -2- (30) on the relay plate
A19	wire connection (58d), in instrument panel wiring harness
A23	wire connection (30al), in instrument panel wiring harness
W37	Connection (DWA), in floor wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

Radio, front speakers, left rear speakers

R	Radio
R14	Treble speaker, left rear, in left rear door
R15	Bass speaker, left rear, in left rear door
R20	Treble speaker, left front, in driver's door
R21	Bass speaker, left front, in driver's door
R22	Treble speaker, right front, in passenger's door
R23	Bass speaker, right front, in passenger's door
T6a	6-Pin Connector, yellow, connector station A-pillar, left
T6b	6-Pin Connector, yellow, connector station A-pillar, right
T6c	6-Pin Connector, red, on B-pillar, left
T8a	8-Pin Connector, brown, on radio
T10r	10-Pin Connector, white, connector station A-pillar, left
T10s	10-Pin Connector, white, connector station A-pillar, right

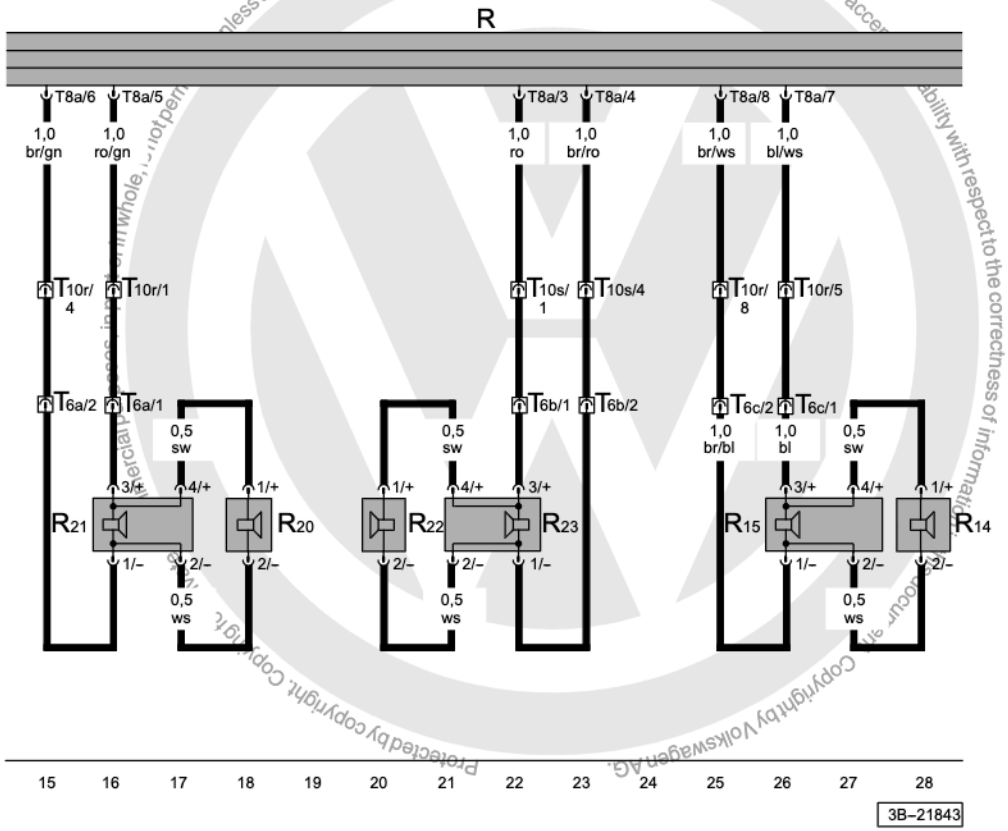

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copyright by Volkswagen AG. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

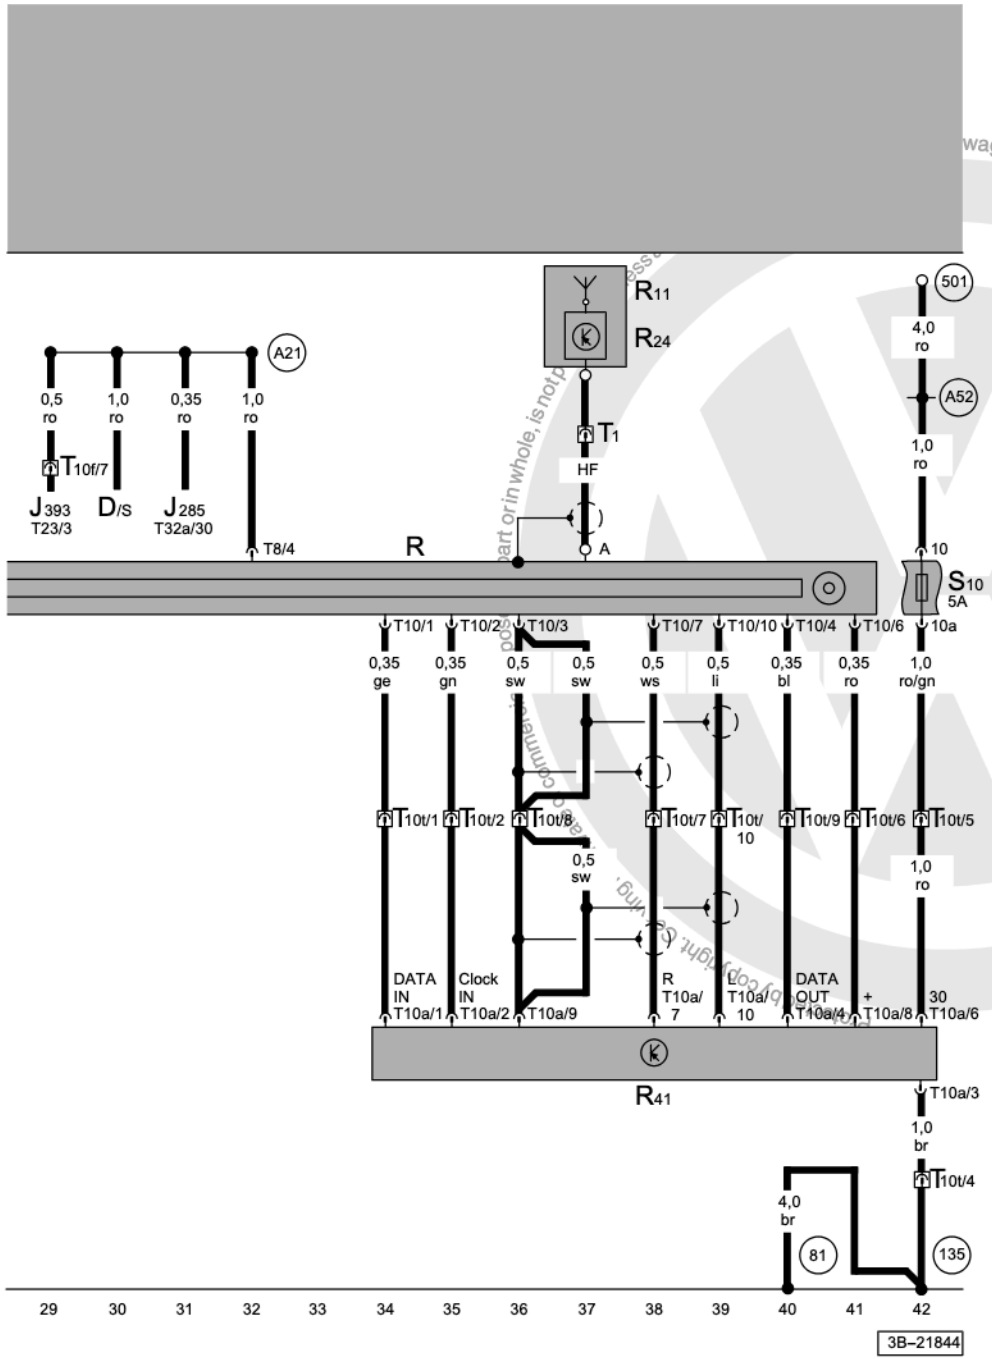

Radio, Antenna, Antenna Amplifier, CD Changer Unit

D	Ignition/Starter Switch
J285	Control module with indicator unit in instrument panel insert
J393	Central control module for comfort system
R	Radio
R11	Antenna
R24	Antenna Amplifier
R41	CD Changer Unit, in luggage compartment
S10	Fuse 10 in fuse holder
T1	1-Pin Connector, black, below console
T8	8-Pin Connector, black, on radio
T10	10-Pin Connector, red, on radio
T10a	10-Pin Connector, red, on CD Changer Unit
T10f	10-Pin Connector, blue, connector station A-pillar, left
T10t	10-Pin Connector, black, connector station A-pillar, right
T23	23-Pin Connector, on central control module for comfort system
T32a	32-Pin Connector, blue, on instrument cluster
81	Ground connection -1-, in instrument panel wiring harness
135	Ground connection -2-, in instrument panel wiring harness
501	Threaded connection -2- (30) on the relay plate
A21	wire connection (86s), in instrument panel wiring harness
A52	plus connection (30), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

wagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.